

JTEKT

Incremental Encoder Series TRD-N Operation Manual

Thank you for purchasing this series TRD-N Incremental Encoder. Please read this Operation Manual carefully before applying this product.

JTEKT ELECTRONICS (WUXI) CO.,LTD.

Add: No.6 Lianhe Road, Hudai Town Binhu District, Wuxi, Jiangsu, P.R.China
Pc: 214161 https://www.jktele.com.cn
Tel: (0510)85167888 Fax: (0510)85161393

JELWX-M8166E-E

Safety Consideration

	Warning	This indicates contents which can cause large accidents leading to loss of life or severe injury when the indication is disregarded and wrong handling is executed.
	Caution	This indicates contents which can cause injury or material damage when the indication is disregarded and wrong handling is executed.

Explanation of the pictograms

- This symbol indicates a general prohibition.
- This symbol indicates a compulsory item or an instruction.

[Operating environment and conditions]

	Warning
	Do not use in a combustible or explosive atmosphere. Otherwise personal injury or fire may be caused.
	Do not use this product for applications related to human safety. Use is assumed in an application where an accident or incorrect use will not immediately cause danger to humans.

[Operating environment and conditions]


	Caution
	Use and store the equipment within the scope of the Environment (vibrations, impact, temperature, humidity, etc.) specified in the specifications. Otherwise fire or product damage may be caused.
	Understand the product first before use it.

[Installation and wiring]


	Warning
	Use only with the power supply voltage listed in the specifications. Otherwise fire, electric shock, or accidents may be caused.
	Use only with the wiring and layout specified in the specifications. Otherwise fire, electric shock, or accidents may be caused.
	Do not apply any kind of stress to the wires. Otherwise electric shock or fire may be caused.

Output circuit

Totem-pole output

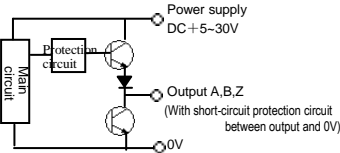

Line driver Output

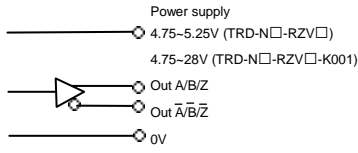

Connection

More than 2501P/R, two-phase output type and Line driver output type, a shield wire (GND) is connected to the encoder's body. As for other products, a shield wire (GND) does not connect with an encoder body.

- Single-phase output type: TRD-N□-S□**
 - Blue: 0V
 - Brown: Power supply
 - Black: OUTA
 - White: Not connected
 - Orange: Not connected
 - Shield: G (ground)
- Two-phase output type: TRD-N□-RZ□/RZ□L**
 - Blue: 0V
 - Brown: Power supply
 - Black: OUTA
 - White: OUTB
 - Orange: OUTZ
 - Shield: G (ground)
- Line driver output type: TRD-N□-RZV□/RZV□-K001**
 - Blue: 0V
 - Brown: Power supply
 - Black: OUTA
 - Purple: OUTA
 - White: OUTB
 - Gray: OUTB
 - Orange: OUTZ
 - Yellow: OUTZ
 - Shield: GND (ground)


Output signal timing chart

(CW rotation viewed from input-shaft of encoder)


- Single-phase output type: TRD-N□-S□**
 - Timing diagram for OUT A showing pulse width and period.
 - 12.5% ≤ a, b, c, d ≤ 37.5%
 - 50% ≤ T ≤ 150%
- Two-phase output type: TRD-N□-RZ□**
 - Timing diagram for OUT A, OUT B, and OUT Z showing phase relationships.
 - OUT Z phase is reversed on the RZL and RZWL models.
- Line driver output type: TRD-N□-RZV□/RZV□-K001**
 - Timing diagram for OUT A, OUT B, and OUT Z showing pulse width and period.
 - Normal revolution T(100%) and Reverse revolution T(100%) are shown.

External dimensions


- Dust-proof type: TRD-N□-S/ RZ/ RZL/ RZV/ RZV-K001**

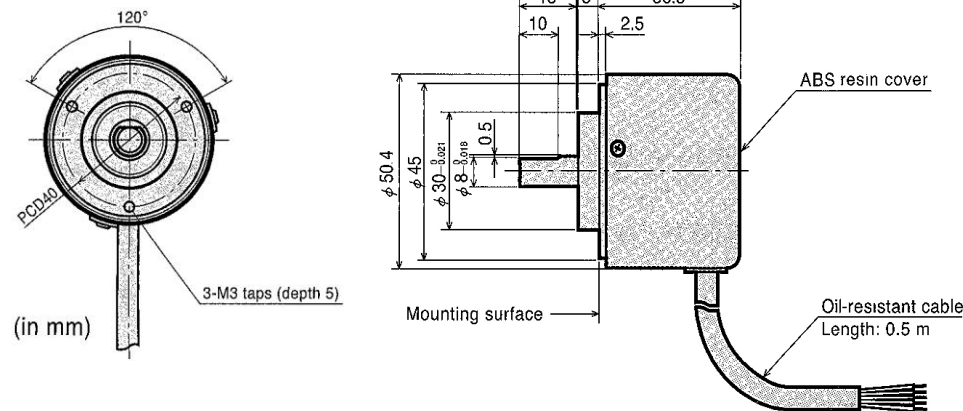

- Dust-resistant, jet-proof type: TRD-N□-SW/ RZW/ RZWL/ RZVW/ RZVW-K001**

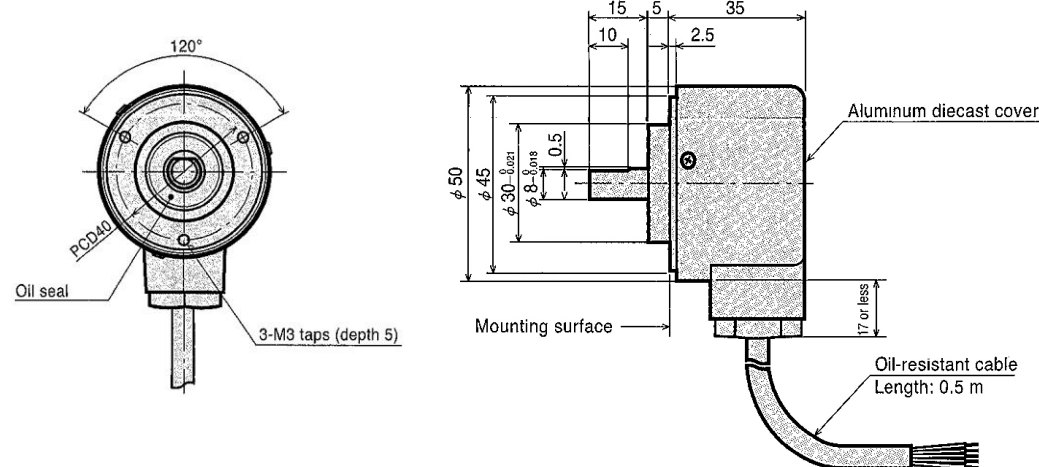

Mounting

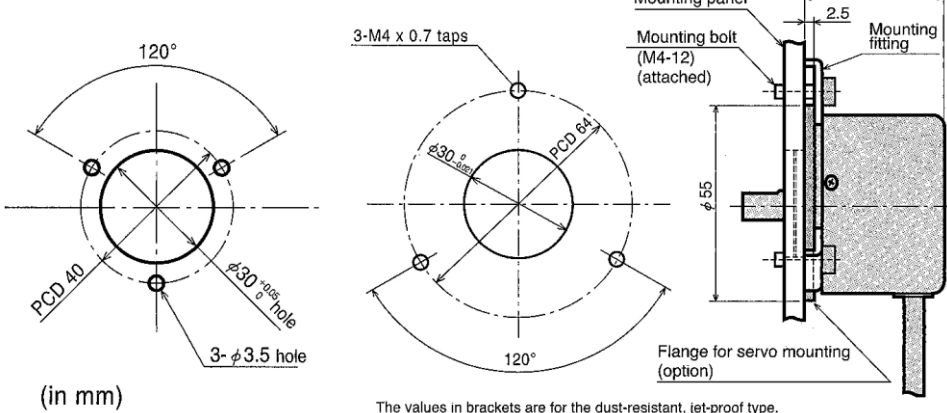

Electrical specifications

Type No.	TRD-N□-S□	TRD-N□-RZ□/RZ□L	TRD-N□-RZV□	TRD-N□-RZV□-K001※1
Power supply	Operating voltage	DC4.75V~30V	DC4.75V~30V	DC4.75V~28V
	Allowable ripple	≤3%rms	≤3%rms	≤3%rms
	Current consumption (no load)	≤40mA	≤60mA	≤40mA
Output waveform	Signal format	Single-phase output	Two-phase output with origin	Two-phase output with origin
	Max. response frequency	100kHz	100kHz	100kHz
	Max. response rotating speed	(Maximum response frequency/Pulse)×60	(Maximum response frequency/Pulse)×60	(Maximum response frequency/Pulse)×60
	Duty rate	50 ± 25%	50 ± 25%	50 ± 25%
	Origin signal width	—	100 ± 50%	100 ± 50%
Output	Rising/falling time※2	≤3μs	≤3μs	≤2μs
	Output configuration	Totem-pole output	Totem-pole output	Line driver output (26C31 or equivalent)
	Output logic	Positive logic (active high)	Positive logic (active high)	Positive logic (active high)
	Output current	Inflow	≤30mA	—
		Outflow	≤10mA	—
	Output voltage	"H"	≥[(Power supply voltage) - 2.5V]	≥2.5V
		"L"	≤0.4V	≤2V (non-loaded)
	Load power supply voltage	≤DC35V	≤DC35V	—
	Short-circuit protection	(With short-circuit protection circuit between output and 0V)	—	—

※1 Only supported by products less than 2500P/R ※2 With a cable of 0.5m

Mechanical specifications

Starting torque		Max. 0.003N・m（+20℃） （0.02N・m for the dust-resistant, jet-proof type.）
Shaft moment of inertia		$2 \times 10^{-6} \text{ kg} \cdot \text{m}^2$
Max. allowable shaft load		Radial : 50N
		Thrust : 30N
Max. allowable speed		5000rpm （for the dust-resistant, jet-proof type: 3000rpm continuously and 5000rpm momentarily.）
Cable	Material	Oil-resistant shielded cable※1
	Nominal core cross section	0.3mm ² （Line driver: 0.14mm ² ）
	External diameter	Φ 6.0mm
Weight（With 0.5m cable.）		Approx. 150g （Approx 200g for the dust-resistant, jet-proof type.）

※1: TRD-N□-S□/RZ□: 5-core oil-resistant shielded cable
TRD-N□-RZV□/RZV□-K001: 8-core oil-resistant shielded cable

Environmental requirements

Ambient temperature	Operation: -10~+70℃	
	Store: -25~+85℃	
Ambient humidity	35~85%RH (non-condensing)	
Withstand voltage	AC500V (50/60Hz) for 1 min	A power supply, signal Line and a case
Insulation resistance	50MΩ min.	Interval. Shield Line does not include it.
Vibration resistance	10~55Hz with 0.75mm amplitude※2	
Shock resistance	~500P/R(metal slit), 980m/s ² , 11ms※3	
	600P/R-(glass slit), 490m/s ² , 11ms※3	
Protection construction	IP50: Dust-proof proofed	
	IP65: Dust-resistant, jet-proof type	


※2: Durable for 1h along 3 axes ※3: Applied 3 times 3 axes
It is an examination condition, and it is not a thing to guarantee for consecutive use.

Cautions for use


- Do not wire the cable in parallel with other power lines and do not share a duct with other cables.
- Use capacitors or surge absorption elements to remove the sparks caused by relays and switches in the control panel as far as possible.
- Be sure to connect all wires properly, as wrong wiring can damage the internal circuitry.
- Erroneous pulses may be caused at the time of power ON and power OFF. After power ON, wait for at least 0.5 sec. before use.
- Do not disassemble the product. Do not expose the product for a long time to water, even if it is a dust-resistant, jet-proof type. Wipe off any water getting onto the product.
- As the rotary encoder is composed of precision parts, its function will be impaired when it is subjected to shocks. Use sufficient care for handling and mounting.

Options


Flange for servo mounting

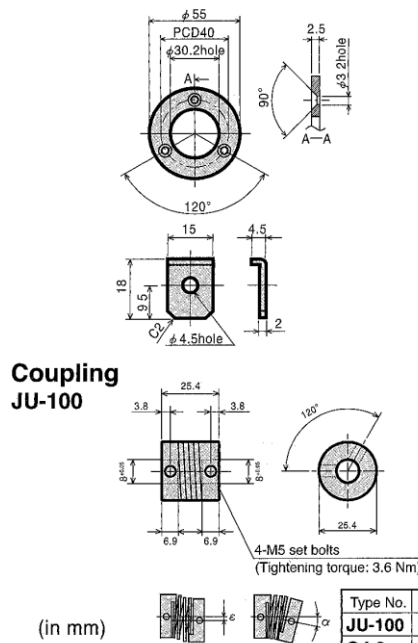


Mounting fitting JT-035

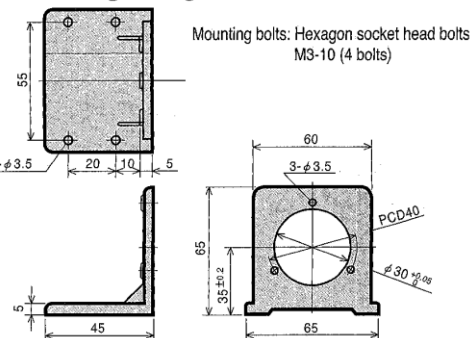

Coupling JU-100

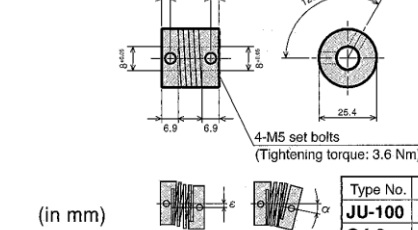

GJ-8

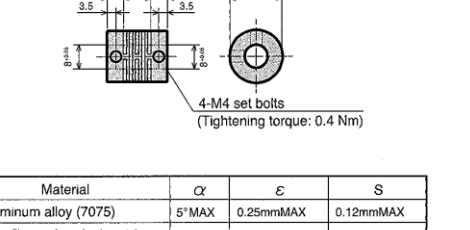

Type No.	Material	α	ε	S
JU-100	Aluminum alloy (7075)	5°MAX	0.25mmMAX	0.12mmMAX
GJ-8	Glass-fiber reinforced polyacetal resin	5°MAX	0.5mmMAX	0.12mmMAX